



















Java アプレ	レット		NETGEAR <sup>®</sup> Everybody's connecting. <sup>®</sup>
NETGEAR <sup>®</sup> L3 Managed Gigabit Switch	NETGEAR L3 Menaged Glaubit Switch © Status © Fault	Port Config 802.1p Priority Mapping Port Detailed Stats Port Summary Stats Eventeen Time Port Config Ethick on	
Navigation	Port Configuratie	VLAN Port Config GARP Port Config	
<ul> <li>System</li> <li>Management</li> <li>Switch</li> </ul>	Slot.Port	IGMP Snooping Interface Contig IP Interface Contig RIP Interface Contig OSPF Interface Contig	
Routing     Traffic Management     Smart Wizard     Opyright © 2004 Netgear.     All rights reserved.	Admin Mode Maximum Frame LACP Mode – Physical Mode	OSPF Interface Stats OSPF Virtual Link Config OSPF Neighbor Info Detailed OSPF Neighbor Table ErriBDie Auto	(1518 to 9216)
	Link Trap	Enable <b>v</b>	1
© 1996-2004 NETGEAR® . All rights r	eserved		11



CLI コンソール画面	NETGEAR <sup>®</sup> Everybody's connecting. <sup>®</sup>
Tera Term - COM4 VT	
User:admin Password:	
NOTE: Enter '?' for Command Help. Command help displays all options that are valid for the 'normal' and 'no' command forms. For the syntax of a particular command form, please consult the documentation.	
(GSM7224) >en Password:	
(GSM7224) ‡show network	
IP Address.       192.168.0.24         Subnet Mask.       255.255.255.0         Default Gateway.       192.168.0.1         Burned In MAC Address.       00:03:58:E2:A6:33         Network Configuration Protocol Current.       DHCP         Management VLAN ID.       1         Web Mode.       Enable         Java Mode.       Enable	
(GSM7224) #	×
© 1996-2004 NETGEARe , All rights reserved	13







CLI ショートカット	NETGEAR* Everybody's connecting.*
<ul> <li>&gt; コマンドの見分けができるまで入力が 完了すれば:         <ul> <li><enter> でコマンド発行</enter></li> <li><tab> または <space bar=""> でコマ ンドラインを完成</space></tab></li> </ul> </li> <li>&gt; 16コマンドを記憶し、 <up-arrow-key> で呼び出せる</up-arrow-key></li> <li>&lt;<p>&gt; クエスチョンマークでヘルプを参照     <li>&gt; キー操作は helpで確認</li> </p></li></ul>	<text></text>
© 1996-2004 NETGEARs . All rights reserved	17

CLI Privileged Exec mode NETGE		
(GSM7224) ≻enable (GSM7224) #?		
clear	Reset configuration to factory defaults.	
configure	Enter into global config mode.	
сору	Uploads or Downloads file.	
disconnect	Close active remote session(s).	
dot1x	Configure dot1x privileged exec parameters.	
exit	To exit from the mode.	
help	Display help for various special keys.	
ip	Configure IP parameters.	
logout	Exit this session. Any unsaved changes are	lost.
network	Configuration for inband connectivity.	
ping	Send ICMP echo packets to a specified IP ad	dress.
reload	Reset the switch.	
remotecon	Configure remote connection parameters.	
set	Set Router Parameters.	
show	Show configured data.	
telnet	Allow or disallow new telnet sessions.	









