# Installation

### **NETGEAR Insight Managed**

### Smart Cloud Wireless Access Point (WAC505)

802.11 Wave 2 AC1200



## Package Contents

Unpack the box and verify the contents:

- NETGEAR Insight<sup>®</sup> Managed Smart Cloud Wireless Access Point (WAC505)
- Installation quide
- Ceiling and wall installation kit

# NETGEAR<sup>®</sup>



The following table shows the two setup options that are available to you and the requirements for the access point (AP).

Setup Option	Power Source	Extra Requirements	Setup Information
AP to Ethernet PoE Switch	РоЕ	None	See this guide
AP to Ethernet non-PoE Switch	Power adapter	Order a power adapter	See the user manual

Note: For information about the setup option with a power adapter, see the NETGEAR Insight Managed Smart Cloud Wireless Access Point (WAC505) User Manual, which you can download from *downloadcenter.netgear.com/*.

Before mounting the access point in a high location, first set up, configure, and test the access point to verify WiFi network connectivity.

### > To set up the access point with a PoE switch:

Set Up the Access Point

Connect an Ethernet cable from the LAN port on the access point to a Power over Ethernet (PoE) switch that is connected to your network or router that is, in turn, connected to the Internet. (The LAN port on the access point is a PoE Ethernet port.)

The figure on the next page shows the setup.

After you connect the access point to the PoE switch, the Power LED of the access point lights solid amber. After about one minute, the Power LED turns solid green and the access point is ready for you to perform the initial configuration (see Configure the Access Point).

The table on the next page shows the basic LED behavior on the access point.

### > Choose one of the following methods to configure the access point:

Open the NETGEAR Insight app and log in to your existing NETGEAR account or create a new account to log in with. Then, follow the prompts in the NETGEAR Insight app to discover and register the access point on the network so that you can configure and manage the access point. For more information on the NETGEAR Insight app, see the NETGEAR knowledge base articles at *netgear.com/support*.





# **Configure the Access Point**

Method 1: Use the NETGEAR Insight app. On your iOS or Android mobile device, go to the app store. Search for NETGEAR Insight, and download the app.







Method 2: Log in over WiFi. From your computer or mobile device, connect over WiFi to the access point's default WiFi network (SSID). The default SSID is on the access point label on the bottom of the access point and is shown in the format NETGEARxxxxx-SETUP. The default password is **sharedsecret**.

(Continued on the next page)

Open a web browser. In the address bar, enter

www.routerlogin.net (or www.aplogin.net), which you can use only during the initial setup of the access point.

The Day Zero Easy Setup page displays.

Select the Management Mode Standalone radio button.

The page adjusts so that you can specify the basic settings, including the country of operation<sup>1</sup>, time zone, the password to log in to the access point, and the WiFi network name (SSID) and password to connect to the WiFi network

After you save these basic settings, the Day Zero Easy Setup page no longer displays when you log in.

Method 3: Log in over Ethernet. Open a web browser from a computer that is connected to the same Ethernet subnet as the access point or to the access point's LAN port directly through an Ethernet cable

In the address bar, enter the IP address of the access point.

Note: If the access point is connected to a network that includes a DHCP server (or router that functions as a DHCP server), you can determine the IP address by using an IP network scanner. Otherwise, the default IP address of the access point is **192.168.0.100**.<sup>2</sup>

The Day Zero Easy Setup page displays.

Select the Management Mode Standalone radio button.

The page adjusts so that you can specify the basic settings, including the country of operation<sup>1</sup>, time zone, the password to log in to the access point, and the WiFi network name (SSID) and password to connect to the WiFi network.

After you save these basic settings, the Day Zero Easy Setup page no longer displays when you log in.

<sup>2.</sup> If you use an Ethernet cable from your computer to the access point's LAN port and the access point functions with its default IP address, make sure that the IP address of your computer is in the 192.168.0.x subnet, with a subnet mask of 255.255.255.0 and a default gateway IP address of 192.168.0.1





# Check the Status

LED	Description			
Ċ	•Off. Power is off.			
	•Solid green. Power is on and the access point is ready.			
Power LED	•Solid amber. During startup, the Power LED lights solid amber. If after five minutes the LED remains solid amber, a boot error occurred.			
	•Fast blinking amber. A firmware update is in progress.			
0	•Off. No link with the network is detected.			
	•Solid green. A link with the network is detected.			
Activity LED	•Blinking green. Network traffic is detected.			
	• <b>Solid blue</b> . The access point functions in Insight management mode but is not connected to the cloud.			
+	•Off. No Ethernet link is detected.			
	•Solid amber. A 10/100 Mbps Ethernet link is detected.			
LAN LED	•Solid green. A 1000 Mbps Ethernet link is detected.			
<b>2.4</b> GHz	•Off. The 2.4 GHz WiFi radio is off.			
•	•Solid green. The 2.4 GHz WiFi radio is on.			
2.4G WLAN LED	• <b>Solid blue</b> . One or more WLAN clients are connected to the 2.4 GHz radio.			
	•Blinking blue. WLAN traffic is detected on the 2.4 GHz radio.			
5GHz	v off. The 5 GHz WiFi radio is off.			
	•Solid green. The 5 GHz WiFi radio is on.			
5G WLAN LED	• <b>Solid blue</b> . One or more WLAN clients are connected to the 5 GHz radio.			
	•Blinking blue. WLAN traffic is detected on the 5 GHz radio.			

For more information about the LEDs, see the NETGEAR Insight Managed Smart Cloud Wireless Access Point (WAC505) User Manual, which you can download from *downloadcenter.netgear.com/*.

# **Deploy the Access Point**

mobile devices

For information about mounting the access point, see the NETGEAR Insight Managed Smart Cloud Wireless Access Point (WAC505) Ceiling and Wall Installation Guide, which you can download from downloadcenter.netgear.com/.

# Support

access point.

NETGEAR, Inc. 350 East Plumeria Drive San Jose, CA 95134, USA

The best location for the access point is elevated, such as mounted on a wall or ceiling, at the center of the WiFi coverage area, and within line of sight of all

### > To deploy the access point:

- 1. Disconnect the access point and position it where you will deploy it.
- 2. Reconnect the access point.
  - For more information, see Check the Status.

Using a mobile or WiFi device, verify connectivity by connecting to the access point and using a browser to connect to the Internet.

Thank you for purchasing this NETGEAR product. You can visit www.netgear.com/support to register your product, get help, access the latest downloads and user manuals, and join our community. We recommend that you use only official NETGEAR support resources.

- Si ce produit est vendu au Canada, vous pouvez accéder à ce document en français canadien à http://downloadcenter.netgear.com/other/.
- (If this product is sold in Canada, you can access this document in Canadian-French at http://downloadcenter.netgear.com/other/.)
- For the current EU Declaration of Conformity, visit http://support.netgear.com/app/answers/detail/a id/11621/.
- For regulatory compliance information, visit http://www.netgear.com/about/regulatory/.
- See the regulatory compliance document before you provide power to the

Make sure that the country is set to the location where the device is operating. The customer is responsible for complying within the local, regional, and national regulations set for channels, power levels, and frequency ranges.