

パッケージ同梱のリソースCDをCD-ROMドライブに挿入し、右図画面表 示の「Install Driver and Utility」をクリックしてください。 インストールが 開始されますので、指示に従って進み、終了したら、パソコンを再起動。

パソコンを再起動後にWGM511をCardBus スロットに挿入すると「新 \bigcirc しいハードウェアーの検索ウィザード」が開始されます。後は「Next」と 「Yes」をクリックし、「Finish」でインストール完了です。

Windows下部のシステムトレイに表示される をクリック して、WGM511 Smart Wizard ワイヤレス設定画面を開きます。 あとは、「SSID」や「WEP」などの無線セキュリティを入力して、無 _線接続を有効にするために、「Apply」をクリックして接続完了です

 $(\mathbf{3})$

Settings	Networks	Statistics	About	1 . Setting	n Niete	orks
NET	GEAR'	ele ted Adapter THE TOEA	R WO IS11 Pre-N Witeless PC	I N	ETGE/	AR" Selected A
Protoes New Profile	-	Save Profile	burne state [Net TA	work Na ne (SSID) VrMac	Channel Seco 10(0) WEP
Network A	w (18iD)	Becurity		1	LETOEAR MMO 0	1 (0) none 1 (0) WEP
METOEAR	Literaced Dations	Disable N WEP				
Network Typ	an analysis of the second seco	P Create with Pas	spruase			
(000 A	Loss Point (Infrastructure)	Pasophrase	126 Bit 🔹	*1	an Otanan	
Ba	mputer to computer (Ad Hoc)	C Enter Key Marici	ily .		Bcan Completed	
C 5.00		and the second se	A TELEVISION OF A DESCRIPTION OF A DESCR			



ettings	Networks		Statistics	Abou	1
NET	GEA	R " 544	cted Adapter 📊	ETGEAR WOMS11 Pri	N Weekess PC
Network Na	ne (SSID)	Channel	Security Signal	MAC Address	Mode
ArMac	vorik BB17 at	10 (0) 1 (0)	WEP 18 % none 0 %	00:11:24:07:5E:9D 00:11:24:80:F7:AF	Access Point Access Point
NETHER	R MMO O	1.005	WEP 48%	001F 85.78 99 AE	Access Point
*	17				
	17				



(C.L.a)

WGM124 ファイアウォール 設定画面

METGEAR Router - Mi ファイル(E) 編集(E) 表示	METGEAR Router - Microsoft Internet Explorer ファイル(E) 編集(E) 表示(M) お気に入り(A) ツール(T) ヘルブ(H)						
NETGE SMAR	NETGEAR SMARTWIZARD Wireless Router model WGM124						
ファイアウォール選択	Firewall Rules	Firewall Rules Help					
 Basic Settings Wireless Settings Security Logs Block Sites Firewall Rules Services Schedule Maintenance Router Status Tアイアウォール設定は Web、FTP,ゲームなど ができます。 	Outbound Services # Enable Service Name Action LAN Users WAN Servers Log Default Yes Any AlLOW always Any Any Never Add Edit Move Delete Inbound Services # Enable Service Name Action LAN Server IP address WAN Users Log Default Yes Any BLOCK always Any Any Never Add Edit Move Delete Delete Delete Delete Add Edit Move Delete Delete Delete Delete Delete Add Edit Move Delete Delete <t< th=""><th>You can use this screen to create Firewall rules to block or allow specific traffic. This feature is for Advanced Administrators only! Incorrect configuration will cause serious problems. Outbound Services This lists all existing rules for outbound traffic. If you have not defined any rules, only the default rule will be listed. The default rule allows all outgoing traffic. To create a new rule: 1. Click the "Add" button. (It does not matter which radio button is selected) 2. The "Outbound Service" screen will be displayed. This screen has its own help file. 3. Complete the "Outbound Service" screen, and save the data. The new rule will be listed in the table when you return to this screen.</th></t<>	You can use this screen to create Firewall rules to block or allow specific traffic. This feature is for Advanced Administrators only! Incorrect configuration will cause serious problems. Outbound Services This lists all existing rules for outbound traffic. If you have not defined any rules, only the default rule will be listed. The default rule allows all outgoing traffic. To create a new rule: 1. Click the "Add" button. (It does not matter which radio button is selected) 2. The "Outbound Service" screen will be displayed. This screen has its own help file. 3. Complete the "Outbound Service" screen, and save the data. The new rule will be listed in the table when you return to this screen.					
 LAN IP Setup Remote Management Web Support Knowledge Base Documentation Logout 		 Click the radio button next to an row in the table. Click the button for the desired actions: Edit - to make any changes to the rule definition. The "Outbound Service" screen will be displayed, with the data for the selected rule. Move - to move the selected rule to a new position in the table. You will be prompted for the new position. Delete - to delete the selected rule. Inbound Services This lists all existing rules for inbound traffic. If you have not defined apprulate only the default will be listed. The default 					
	N	rule blocks all inbound traffic.					



製品についてのご質問はサポートセンターへご連絡ください