

BCWM 対応の AP で BCWM モードを無効にする方法

BCWM(Business Central Wireless Manager)モードに対応するビジネスワイヤレス AP またはファームウェアは、初期状態で BCWM モードが有効になっています。BCWM モードを無効にし、Standalone モードのみで動作するように設定します。BCWM モードについての詳細はこちら(<https://wireless.netgear.com/>)をご覧ください。


対象 : WNDAP660, WNDAP350, WNDAP360, WNAP320, WNAP210v2

使用機器 : WNDAP360 / ファームウェア : 3.0.0.7


1. ブラウザより AP の管理画面にログインします。(下は初期値)

IP アドレス/サブネットマスク: 192.168.0.100/255.255.255.0

Username/Password: admin/password

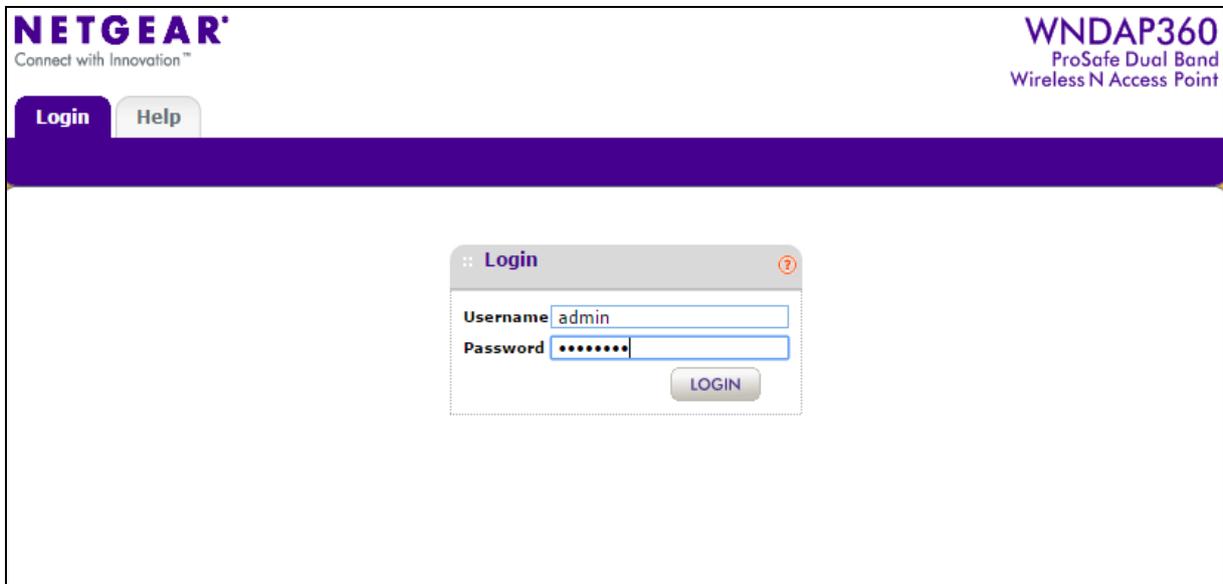

2. 続いて、初期パスワードの変更をおこないます。パスワードを入力し、画面右下の[Apply]をクリックします。[Current Password]に現在のパスワード(password)、[New Password]および[Repeat New Password]に新しいパスワードを入力します。

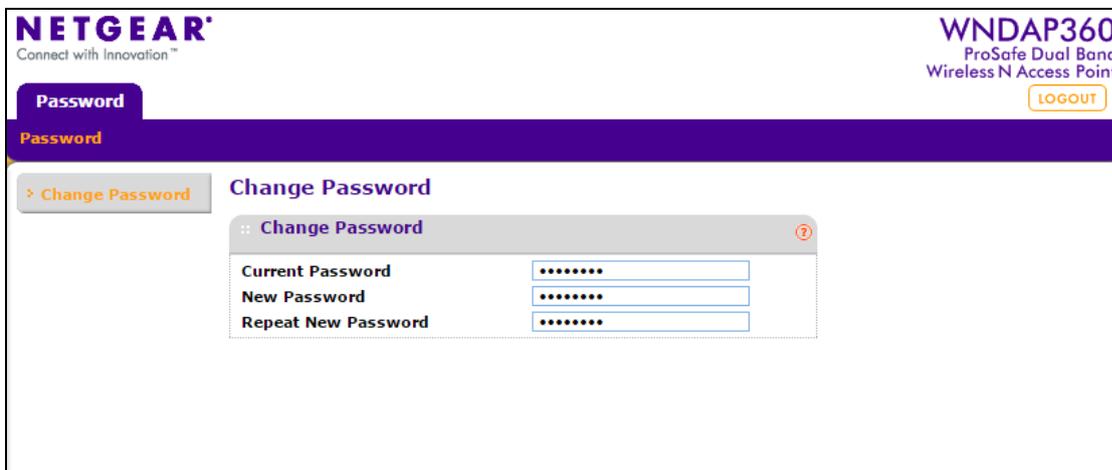

- 変更後のパスワードで、再度ログインします。

NETGEAR®
Connect with Innovation™

WNDAP360
ProSafe Dual Band
Wireless N Access Point

Login Help

Username admin
Password *****
LOGIN

- [Configuratoon]>[System]>[Basic]>[General]>[Cloud settings]
[Cloud Enabled]で、[No]を選択します。その後、[Apply]をクリックします。

NETGEAR®
Connect with Innovation™

WNDAP360
ProSafe Dual Band
Wireless N Access Point

Configuration Monitoring Maintenance Support

System IP Wireless Security Wireless Bridge

Basic
General
Time
Advanced

General

Access Point Name netgear8488C8
Country / Region Japan

Cloud Settings

Cloud Enabled Yes No
Cloud Activation Status Pending
Cloud Connectivity Status Disconnected

[Click here to open Cloud Management](#)

NOTE: If Cloud Enabled is set to Yes, this Access Point will periodically attempt to contact NETGEAR Cloud Wireless Server to check if this Access Point has been registered for cloud management.

CANCEL APPLY