

ReadyNAS 6.4 では、共有に対してクォータ (Quota) を設定することが可能になりました。  
ここではクォータについての概要とともに設定方法を紹介します。

#### 搭載されたクォータの仕様について

- ・共有作成時にも既存の共有のプロパティからも設定可能 (既存の共有の場合、クォータが使用容量以上の値を設定する必要あり)
- ・クォータでは、データとメタデータどちらも含みます。そのため、共有にたくさんのメタデータがあり、小さいクォータ値を設定した場合、制限とみなされる場合があります。
- ・スナップショットで使用された容量はクォータには含まれません。スナップショットのロールバックを行い、クォータの容量を超えることも想定されますのでご留意下さい。

<設定方法> 既存の共有に対して設定する場合

[共有] > 共有のギアマークをクリック > [プロパティ] > サイズ: から始まる箇所

SSales

プロパティ ネットワークアクセ... スナップショット ファイルアクセス

名前: SSales

説明:

Bit Rot保護 (コピーオンライト)


圧縮

サイズ:  クォー... 1 | TB


OK キャンセル 適用

・ Windows でクォータ値を超えた場合に出力されるエラー例

"An unexpected error is keeping you from copying the file. If you continue to receive this error, you can use the error code to search for help with this problem. Error 0x8007003A: The specified server cannot perform the requested operation."

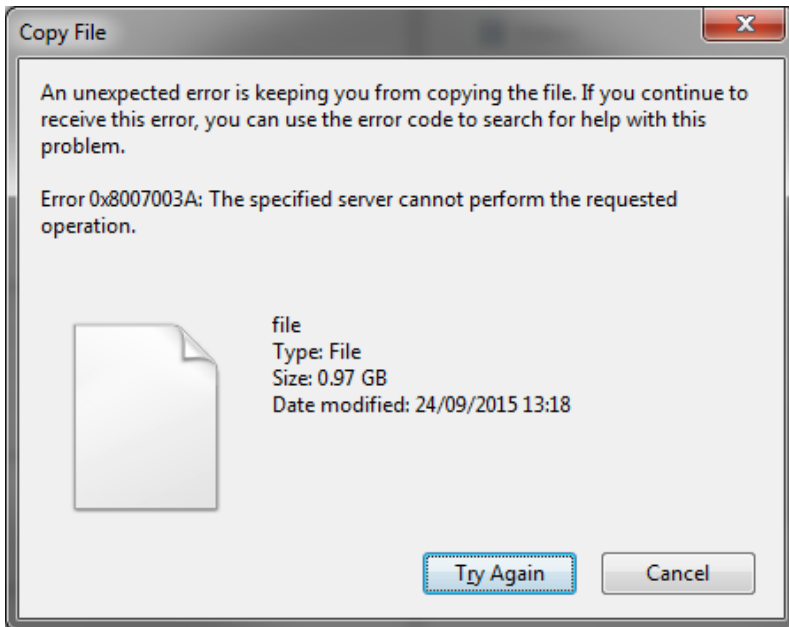

"There is not enough space on share <PATH>. xMB/GB/TB is needed to copy this item. Delete or move files so you have enough space. There was not enough space for this item. Free up space from this disk and try again."

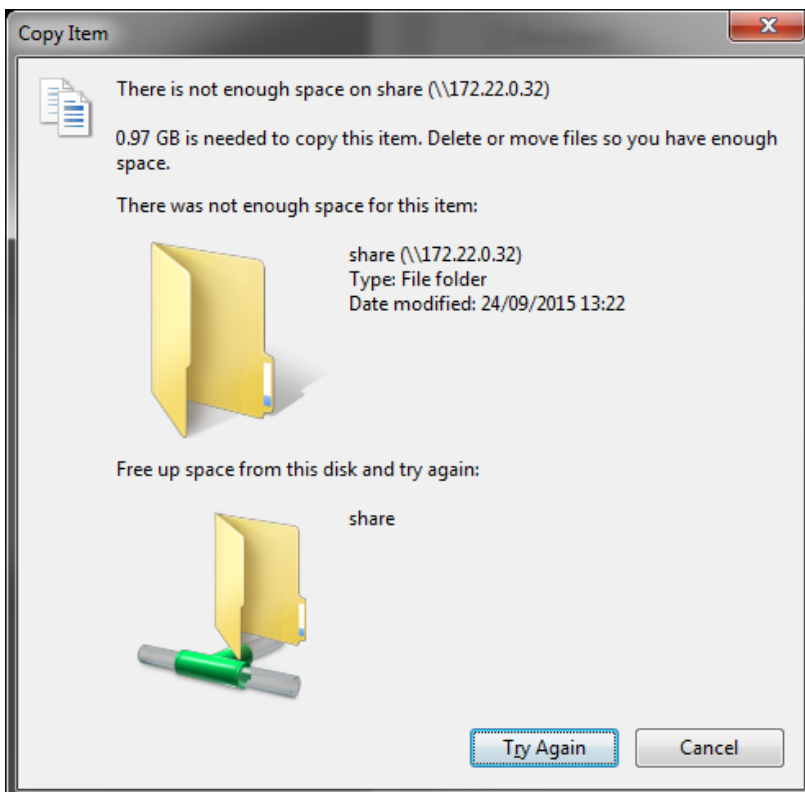

- ・ Mac OS X でクォータ値を超えた場合に出力されるエラー例

"The operation can't be completed because the disk is full."

